



**SIMPLIFY
ACCESS &
CONTROL**

Intelli-Site Lite 4.2

Security Management Software

Installation Guide

Intelli-Site Lite 4.2

Security Management Software

Installation Guide

For Windows 11 Pro and Enterprise,
Server 2019, and
Server 2022

Intelli-Site Lite 4.2 Installation Guide

Copyright

Copyright © 2015-2025 OLTIS Security Systems International All rights reserved.

Information in this document is subject to change without notice. The software described in this document is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of those agreements. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or any means electronic or mechanical, including photocopying and recording for any purpose other than the purchaser's use without the written permission of OSSI.

OSSI, LLC
10125 S 52nd St.
Franklin, WI 53132-8677
ossi-usa.com

Telephone: (262) 522-1870
Toll Free: (888) 488-2623
Fax: (262) 522-1872

Trademarks

Intelli-Site® is registered in U.S. Patent & Trademark Office.

All other registered and unregistered trademarks are the sole property of their respective owners.

Intelli-Site Lite 4.2 Installation Guide

EULA

The following terms of service and end user license agreement ("EULA") constitute an agreement between you ("Buyer") and OSSI, (OLTIS Security Systems International) and its affiliates ("OSSI"). This EULA governs your use of Software and Services (as specified below).

For purposes of this EULA "Software" means all software programs distributed, published or otherwise made available by OSSI or its affiliates including, but not limited to Intelli-Site, Intelli-Site CS, ES, GS and Lite, and Intelli-Track. Software also includes updates and upgrades as well as accompanying manual(s), packaging and other written, files, electronic or on-line materials or documentation, and any and all copies of such software and its materials.

"Services" means all services made available by OSSI, including but not limited to services accessed through mobile device, by means of a browser or by other online communication method. Software and Services are collectively referred to as "OSSI Services".

THE SOFTWARE IS LICENSED, NOT SOLD. YOUR USE OF THE SOFTWARE (AS SPECIFIED BELOW) IS SUBJECT TO THE TERMS AND CONDITIONS SET FORTH IN THIS EULA. BY INSTALLING, USING OR ACCESSING THE OSSI SERVICES OR ANY MATERIALS INCLUDED IN OR WITH THE OSSI SERVICES, YOU HEREBY ACCEPT THE TERMS OF THIS EULA.

If you do not accept the terms of this EULA, do not install, use or access the OSSI Services.

1. LICENSE

1.1 All software provided to Buyer shall be licensed subject to the terms and conditions of this Agreement. OSSI grants to Buyer and Buyer accepts a non-exclusive, non-transferable license to use any software and related documentation provided by OSSI pursuant to this Agreement ("Licensed Software") for Buyer's own internal use, solely in conjunction with hardware supplied or approved by OSSI. In case of equipment failure, Buyer may use the Licensed Software on a back-up system, but only for such limited time as is reasonably required to rectify the failure.

1.2 Buyer acknowledges that OSSI may have encoded within the Licensed Software a "license key", establishing the usage

Intelli-Site Lite 4.2 Installation Guide

and functionality (e.g., the number of equivalent nodes and Workstations or other features) of the software as it has been licensed to the Buyer. The usage or functionality of such Licensed Software may be expanded only upon payment to OSSl of an applicable upgrade fee.

The above referenced license key shall be conveyed to Buyer upon installation of the Licensed Software or upgrade.

2. PROTECTION AND SECURITY OF LICENSED SOFTWARE

- 2.1 Buyer acknowledges and agrees that the Licensed Software contains proprietary and confidential information of OSSl and its third party suppliers and agrees to keep such information confidential. Buyer agrees not to allow access to the Licensed Software except by its employees having a need for such access, in keeping with its intended use as set forth herein. Such employees shall have been advised of the confidential and proprietary nature of information contained in the Licensed Software and shall have agreed to protect same.
- 2.2 All right, title and interest in and to the Licensed Software, other than that expressly granted to Buyer herein, shall remain vested in OSSl or its third party suppliers. Buyer shall not, and shall not permit others to: copy, translate, modify, create derivative works from, reverse engineer, decompile, encumber or otherwise use the Licensed Software, except as is specifically authorized under this Agreement. All appropriate copyright and other proprietary notices and legends shall be retained on all Licensed Software supplied by OSSl, and Buyer shall maintain and reproduce such notices on any full or partial copies made.

3. TERM

- 3.1 The license shall become effective upon delivery of the Licensed Software to Buyer.
- 3.2 OSSl may terminate this Agreement and/or any license issued hereunder:
 - (a) upon written notice to Buyer if any amount payable to OSSl, is not paid within thirty (30) days of the date on which payment is due;
 - (b) if Buyer becomes bankrupt, makes an assignment for the benefit of its creditors, or if its assets vest or become subject to the rights of any trustee, receiver or other administrator;
 - (c) if bankruptcy, reorganization or insolvency proceedings are instituted against Buyer and not dismissed within 15 days; or
 - (d) if Buyer breaches a material provision of this Agreement and such breach cannot be rectified or is not rectified within 15 days of receipt of written notice of the breach from OSSl

Intelli-Site Lite 4.2 Installation Guide

- 3.3 Upon termination of any license, Buyer shall return or destroy all copies of the respective Licensed Software. All obligations of Buyer arising prior to termination, and those obligations relating to confidentiality and non-use, shall survive termination of this Agreement or of the license.

4. SUPPORT AND UPGRADES

Buyer shall receive software support and upgrades for the Licensed Software only to the extent provided for in the applicable OSSl software support program then currently in effect, and upon payment of any applicable fees.

5. CHARGES

Upon shipment of the Licensed Software, OSSl will invoice Buyer for all fees, and any taxes, duties and other charges. Buyer will be invoiced for any increased usage and functionality upon issuance by OSSl of a new software application key. All amounts shall be due and payable within thirty (30) days of receipt of invoice.

6. WARRANTIES

- 6.1 OSSl warrants, for a period of 90 days from the date of shipment, that the Licensed Software, as originally delivered to Buyer, will operate substantially in accordance with the functional description set out in the user manual supplied with the Licensed Software, when the Licensed Software is used in accordance with the user manual. OSSl's sole liability and Buyer's sole remedy for a breach of this warranty shall be OSSl's good faith effort to rectify the nonconformity or, if after repeated efforts OSSl is unable to rectify the non-conformity, OSSl shall accept return of the Licensed Software and shall refund to Buyer all amounts paid in respect thereof. This warranty is available only once in respect of any Licensed Software, and is not renewed by the payment of fees for additional equivalent nodes or other increased use.

- 6.2 OSSl EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, WARRANTIES OR REPRESENTATIONS OF WORKMANSHIP, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, DURABILITY, OR THAT THE OPERATION OF THE LICENSED SOFTWARE WILL BE ERROR FREE.

- 6.3 Buyer acknowledges and agrees that the Licensed Software supplied under this contract are intended for standard commercial uses and are not specifically designed, manufactured or intended for use or resale in critical applications or hazardous environments requiring fail-safe performance and in which the failure of Licensed Software could lead directly to death, personal injury, or severe physical or environmental damage (including, without limitation, the operation or on-line control of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines, or weapons systems). Such undertakings are considered "High Risk Activities." Suitability of Licensed Software for use in one or more High Risk Activities would require additional appropriate development and design engineering by OSSl including but not limited to the addition of appropriate

Intelli-Site Lite 4.2 Installation Guide

redundancy and/or contingency procedures. OSSI and its suppliers explicitly disclaim any express or implied warranty of fitness for High Risk Activities and Buyer hereby agrees to release and hold OSSI harmless from liability resulting out of or in connection with implementation of these Licensed Software in High Risk Activities, either named or unnamed in this document.

7. LIMITATION OF LIABILITY

IN NO EVENT SHALL THE TOTAL COLLECTIVE LIABILITY OF OSSI, ITS EMPLOYEES, DIRECTORS, OFFICERS OR AGENTS FOR ANY CLAIM, REGARDLESS OF VALUE OR NATURE, EXCEED THE AMOUNT PAID PURSUANT TO THIS AGREEMENT FOR THE LICENSED SOFTWARE THAT IS THE SUBJECT MATTER OF THE CLAIM. IN NO EVENT SHALL THE TOTAL COLLECTIVE LIABILITY OF OSSI, ITS EMPLOYEES, DIRECTORS, OFFICERS OR AGENTS FOR ALL CLAIMS EXCEED THE TOTAL AMOUNT PAID BY BUYER TO OSSI HEREUNDER. WITH THE EXCEPTION OF DAMAGES FOR THE MISUSE OR MISAPPROPRIATION OF SOFTWARE, PROPRIETARY PROPERTY OR CONFIDENTIAL INFORMATION, NO PARTY SHALL BE LIABLE FOR ANY INDIRECT, CONSEQUENTIAL DAMAGES, WHETHER OR NOT SUCH DAMAGES ARE SPECIAL OR FORESEEABLE, AND/OR THE PARTY HAD BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

8. GENERAL

- 8.1 Under no circumstances shall either party be liable to the other for any failure to perform its obligations (other than the payment of any monies owing) where such failure results from causes beyond that party's reasonable control.
- 8.2 This Agreement constitutes the entire agreement between OSSI and Buyer with respect to the subject matter referenced and supersedes all prior oral and written communications. No alteration or amendment to this Agreement shall be valid unless the same shall be in writing and signed by authorized representatives of both parties.
- 8.3 If any provision of this Agreement is held to be invalid, illegal or unenforceable, it shall be deemed severed and the remaining provisions shall continue in full force and effect.
- 8.4 The Licensed Software may contain freeware or shareware obtained by OSSI from one or more third party source(s). No license fee has been paid by OSSI for the inclusion of any such freeware or shareware, and no license fee is charged to Buyer for its use. **BUYER ACKNOWLEDGES AND AGREES THAT THE THIRD PARTY SOURCE(S) PROVIDE(S) NO WARRANTIES AND SHALL HAVE NO LIABILITY WHATSOEVER IN RESPECT OF BUYER'S POSSESSION AND/OR USE OF THE FREWARE OR SHAREWARE.**
- 8.5 OSSI shall have the right, at its own expense and upon reasonable written notice to Buyer, to periodically inspect Buyer's premises and such documents as it may reasonably require, for the exclusive purpose of verifying Buyer's compliance with its obligations under this Agreement.
- 8.6 Any notice provided hereunder shall be sent to the party's respective address, or to any other such address as may be

Intelli-Site Lite 4.2 Installation Guide

specified from time to time. Notices shall be deemed to have been received five days after deposit with a post office when sent by registered or certified mail, postage prepaid and receipt requested.

- 8.7 If the Licensed Software is being acquired by or on behalf of any unit or agency of the United States Government, the following provision shall apply: If the Licensed Software is supplied to the Department of Defense, it shall be classified as "Commercial Computer Software" and the United States Government is acquiring only the rights specified in this License Agreement as defined in DFARS 227.7202-1(a) and 227.7203-3(a). If the Licensed Software is supplied to any other unit or agency of the United States Government, rights will be defined in Clause 18-52.227-86(d) of the NASA Supplement to the FAR.
- 8.8 Buyer shall comply with all export regulations pertaining to the Licensed Software in effect from time to time. Without limiting the generality of the foregoing, Buyer expressly warrants that it will not directly or indirectly export, re-export, or transship the Licensed Software in violation of any export laws, rules or regulations of Canada, the United States or the United Kingdom.
- 8.9 No term or provision of this Agreement shall be deemed waived and no breach excused unless such waiver or consent is in writing and signed by the party claimed to have provided such waiver or consent. No waiver by either party of any right, failure to perform or of any breach by the other party hereunder, shall be deemed to be a waiver of any other right hereunder or of any other breach or failure by such other party, whether of a similar nature or otherwise.
- 8.10 This Agreement shall be governed by and construed in accordance with the laws of Wisconsin. The application of the United Nations Convention on Contracts for the International Sale of Goods is hereby expressly excluded. It is the express wish of the parties that this Agreement and all related documents be drawn up in English.

C'est la volonté expresse des parties que la présente convention ainsi que les documents qui s'y rattachent soient rédigés en anglais.

Technical Support Assistance

OSSI, LLC Headquarters

OSSI, LLC
10125 S 52nd St.
Franklin, WI 53132-8677
(262) 522-1870

Technical Support

Technical support is available via telephone or email. Contact Technical Support 8:00 AM to 5:00 PM Central Standard time. When calling after hours, please leave a detailed voice mail message, and someone will return your call as soon as possible.

Email: support@ossi-usa.com

When calling, please be at the computer prepared to provide the following information:

- Product version number, found by selecting the  **About** button from the Intelli-Site Lite Application Menu.
- The type of computer being used, including operating system, processor type, speed, amount of memory, type of display, etc.
- Exact wording of any message that appears on the screen.
- What was occurring when the problem was detected?
- What steps have been taken to reproduce the problem?
- It is highly recommended that the user generate a support package for transmission to Intelli-Site technical support staff. To generate the package, run the Intelli-Site Lite Configuration Utility. *Create Support Package...* is the last option in the **Tools** menu.

Table of Contents

Copyright	3
Trademarks	3
EULA	4
Technical Support Assistance	9
Table of Contents	10
Introduction	12
Key Features	13
Optional Features.....	15
System Requirements.....	17
Display Settings.....	17
Symbols and Conventions	18
Notes, Tips, and Cautions	18
Fonts	18
Display Buttons	18
Installation Guide	19
Software Components	19
Operating System Prerequisites	20
Internet Information Services (IIS) Components	20
Microsoft .NET Framework 4.6.x	25
Installing Intelli-Site Lite Software.....	25
Intelli-Site Lite Installer	26
Intelli-Site Lite Setup Module.....	32

Intelli-Site Lite 4.2 Installation Guide

Project Creation and Web Service Installation.....	33
Licensing Intelli-Site Lite	38
Online Activation	40
Offline Activation	41
Load the License File	42
Table of Figures	44
Revision History	46

Intelli-Site Lite 4.2 Installation Guide

Introduction

The Intelli-Site software is a scalable, PC-based system designed to integrate, control, and manage electronic security components and subsystems. Intelli-Site integrates electronic security products and subsystems from multiple manufacturers into a single functionally enhanced, centrally controlled security system.

Intelli-Site allows for integration of the following types of subsystems:

- Access control systems and field panels
- Closed circuit television matrix switchers
- Digital video multiplexers
- IP DVRs with action controls
- Fire alarm systems and panels
- Proximity Sensors
- Intercom systems (microprocessor based)
- Radio paging systems
- Burglar alarm digital receivers
- Programmable logic controllers (PLCs)

Intelli-Site incorporates a user-defined point and click windows graphical user interface (GUI) that can be configured to meet the unique needs and skill level of each user. In addition, Intelli-Site has a web browser interface that can be enabled or disabled.

Intelli-Site utilizes a Tree window display that supports full graphical drag-and-drop configuration and setup. The system administrator, via password-controlled user profiles, assigns system features.

The Intelli-Site GUI allows the user to add site, building and floor plan map graphics or control diagram graphics to support alarm annunciation, device control and device monitoring that is uniquely suited to the user's requirements. Intelli-Site supports Screen Objects (smart Icons) that graphically show the status of each device utilizing an infinite number of states. These user-defined Screen Objects allow the operator to control and monitor devices using a mouse or optional touch screen.

Many common functions of the Intelli-Site GUI have been combined into Views that greatly simplify programming, maintenance, and daily use.

Intelli-Site Lite 4.2 Installation Guide

Key Features

Integration support for existing and future equipment – Intelli-Site is a true “open architecture” software package that can incorporate previously installed and future electronic security equipment from different manufacturers into a single, fully integrated, multi-user security management system.

Two Client Interfaces – The Intelli-Site system has two client interfaces: the traditional desktop client and a web interface. The Intelli-Site Web Service allows the User to access the Intelli-Site system via standard web browsers on computers and handheld devices.

Multiple Client Platforms – The Intelli-Site Web Service allows the User to access the Intelli-Site system via standard web browsers on computers and handheld devices such as tablets and smart phones.

Views – Formerly known as Modes, the Views combine common functionality into simple, graphical, intuitive interfaces. There are Views for Access Management, Hardware Management, Reports, Documentation, Scheduled Events, Activity, Video as well as the  **Design View** and  **Live View** from previous versions of Intelli-Site. There is also a view to manage and monitor Accutech systems.

User-defined functionality – Intelli-Site allows the user to pre-define the actions to be executed upon the occurrence of each system event. Previously defined actions can be changed at any time - as often as necessary - using “point and click” menus and selections. Multiple events are processed simultaneously in a multi-tasking, multi-threaded environment.

User-defined alarm and event processing – Intelli-Site allows the user to customize messages, priorities, colors, audio sounds (.wav files), video events, functionality, and Screen Objects associated with alarm and event conditions.

Intelli-Site Lite 4.2 Installation Guide

User-defined graphical user interface (GUI) – Intelli-Site provides a user-defined GUI that can be designed and configured to meet the unique needs and skill level of each user. The GUI is comprised of standard windows tool bars, Node Trees, Dialog Boxes, and graphic images. User defined graphic images are designed and produced utilizing industry-standard graphics software packages that support a broad-range of image formats.

Text-to-Speech (TTS) – Intelli-Site's TTS software feature allows activation of a computer-synthesized voice that speaks to the user. It can announce cardholder names, system events and actions, as well as provide command verification and special instructions. The user hears the name and the action taken by cardholders, as well as confirmation of the user's actions, and system instructions. In order to utilize the TTS software module, a Windows Server Class- or Windows XP Professional-compatible sound card and speakers are required

User controlled access – Intelli-Site uses its own user database to restrict and manage access to modules and functions (internal passwords) or can make use of Windows Users and User Groups security services. All access to the Intelli-Site system is controlled by password as defined by the system administrator.

Operating System – Intelli-Site runs under the Microsoft Windows Server Class and several versions of Windows. See [Minimum System Requirements](#) for a complete list. Following good security practice, we recommend you keep current with ongoing Microsoft released OS security updates. Such updates should not interfere with Intelli-Site operations.

Database – Intelli-Site utilizes PostgreSQL.

Reports – Intelli-Site includes a built-in report generator to provide quick, pre-defined reports that include data specific to system operations.

Multi-Lingual User Interface – **Not Yet Implemented** Intelli-Site employs a built-in language string translation table to provide the end user with the ability to translate the operator interface pages into a virtually unlimited number of languages. The language presented to an operator will be automatically selected based upon the operator's Windows logon credentials and localization settings.

Intelli-Site Lite 4.2 Installation Guide

Network – Intelli-Site uses TCP/IP to provide an integrated, networked system. Intelli-Site integrates into existing networks, reducing overall installation and maintenance costs. The Intelli-Site Lite Administrator can add new Workstations to enhance overall system control and monitoring.

Optional Features

Access Management (AM) – The AM feature allows the system to support card access control operations. The Card Management System module allows the user to add, modify, and delete cardholder data, time zones, access levels and access groups utilizing a user-defined point-and-click GUI. Intelli-Site allows the system administrator to add and delete database fields and graphically design individual on-screen data entry forms to meet the unique needs of each facility.

Video Badging (VB) – The VB feature allows the user to capture and store a digital picture image, graphically create and produce multiple badge designs to meet user-specific requirements as well as print photo ID badges for use with card access operations.

Live Video (LV) – The LV feature allows a user to program a live video picture from a camera to automatically display upon detection of a user-defined event within the Intelli-Site system, such as an alarm condition or card access event.

Video Recording (VR) – **Not Yet Implemented** The VR feature allows Intelli-Site to record video from a camera on demand or in response to an alarm. Both post-alarm & pre-alarm video recording are available.

Engine Redundancy (ER) – The ER feature allows multiple Intelli-Site Engines to be configured as a hot-standby Engines to an existing Intelli-Site Engine to minimize downtime due to any computer/network failure (e.g. hard drive failure on the primary computer). The secondary Engines will wait offline ready to replace the primary Engine in the case of a failover event, whether planned (e.g. Engine maintenance) or not. These redundant Engines must of course reside on a separate host computer.

SQL Server Database (SQL) –The SQL feature allows an MS-SQL Server to be used for Intelli-Site's database.

Intelli-Site Lite 4.2 Installation Guide

Oracle Database (ORL) – Not Yet Implemented The ORL feature allows an Oracle database to be used for Intelli-Site's card holder database.

Door Construct (DC) – The DC feature allows a central configuration point for doors. From here, you can drag and drop panel I/O Points into a door to simplify programming. Included in this feature is the ability to build Interlock Groups. Doors are configured to be members of an interlock group so that access attempts to doors within the interlock group will be denied should any door belonging to the interlock group be open.

Alarm Zone (AZ) - The AZ feature allows a central configuration point for alarm zones. From here, you can drag and drop panel I/O Points into an alarm zone to simplify programming. Included in this feature is the ability to build multiple-sensor alarm zones that have the capability of combining different types of sensor signals and determining alarm response to direction, multiplicity of sensor alarms, types, etc. The Alarm Zone Construct also allows for assignment of video assessment systems (cameras) on a zone-by-zone basis.

Anti-Passback (AP) – The AP feature provides a means to strengthen access control. By defining Anti-Passback zones & doors, access to other zones is restricted by both access permissions and cardholder presence. Depending on the Anti-Passback zone setting (hard or soft), you can deny access or just log violations. Mustering is included with this feature. This feature requires the Door Construct.

Multi-Queue (MQ) – The MQ feature provides a means to send alarms to a user created Queue. As such, the master alarm queue of the Information Manager can be hidden, but certain alarms and I/O Point states can still be seen and managed. These queues can be configured to pop up automatically whenever there is a new alarm or I/O Point state change.

Database (DB) –The DB feature provides additional database functionality beyond that which is included by default. With this feature, you can add database tables and create screens to manage those tables in  **Live View**.

Intelli-Site Lite 4.2 Installation Guide

System Requirements

Operating System:	Windows 11 (Pro or Enterprise), Windows Server 2019 Windows Server 2022
CPU (Processor):	Minimum: Intel I7 Quad Core 2.8 GHz
RAM (Memory):	Minimum: 16GB DDR2 800 MHz Recommended: 32GB DDR4 SDRAM
HDD (Disk Space):	Minimum: 200GB & 1TB SATA Secondary Drive Recommended: 1TB
VGA (Video):	Minimum: 1GB VRAM @ 700Mhz Recommended: 4GB VRAM DDR3 @ 700MHz
Display:	17" VGA (Touch screen optional)
Input Devices:	Mouse, keyboard
Network & Protocols:	1Gb network adapter with Windows TCP/IP v4

Note: OSSI will continue to support existing systems that conform to the previous system requirements including Windows 10 (Pro or Enterprise) 64-bit. Everyone is encouraged to migrate to the new system requirements.

A Windows compatible sound device or card is recommended on the Client systems so that alerts and other sounds may be heard.

Display Settings

The minimum supported display setting is 1024x768 with small icons in the taskbar. All Views and screens have been designed for this display setting with a mind to be compatible with most handheld devices. There are a couple dialogs that are only used in configuration and programming that require 1920x1080. These dialogs are not intended to be used during normal day-to-day operations once the system has been configured and programmed at which point the minimum supported display applies.

Symbols and Conventions

Notes, Tips, and Cautions

 
Special comments, or areas that demand extra-close attention, are flagged throughout this manual with separating lines and a boldface keyword, as shown below.

Note: *When scanning a set of instructions, pay attention to information separated by lines, as shown here. It may save some time or help avoid common mistakes.*

Fonts

Words or phrases that appear as display buttons, keyboard keys, or Nodes appear in **bold**. Words or phrases that appear in drop-down or context menus appear in *italics*.

Display Buttons

In general, when the manual refers to a graphic screen button, the button name and its graphic will be displayed. For example: the  **Design View** button located in the Application Menu. The text buttons will be displayed as they appear in the software (e.g. ).

Installation Guide

Installing Intelli-Site Lite is a simple process but one that requires planning. Because the software is an object-oriented collection of linked software components it is important to understand what each component is before installing. Once you understand the components and have planned where to install each, then installation can begin.

Software Components

Intelli-Site Lite is an object-oriented collection of linked software components that communicate using an industry standard, socket interface.

Intelli-Site Lite has five main software components:

- Intelli-Site Lite Engine
- Intelli-Site Lite Driver Service
- Intelli-Site Lite Database
- Intelli-Site Lite Web Service (optional)
- Intelli-Site Lite Client
- Intelli-Site Lite Client Manager Service (optional)

The socket interface allows each software component to reside on the same computer or on several different computers. This gives Intelli-Site Lite extensibility and flexibility.

The Desktop Client will often be installed on more than one computer as there will be more than one physical location where the software is to be used and managed. Distributed hardware systems and redundancy will also cause components to be installed on multiple computers. This guide will walk you through installing on a single computer without redundancy or distributed systems. Contact technical support for help if you have a redundant system.

Note: See the OSSI Knowledge Base Article [“Quick Start Guide for Configuring Redundancy in Intelli-Site 4”](#) for help in setting up redundancy.

Intelli-Site Lite 4.2 Installation Guide

Operating System Prerequisites

There are a couple prerequisites to installing the Intelli-Site Lite software.

- Internet Information Services (IIS) Components (if the Web Service is to be installed)
- Microsoft .NET Framework 4.6.x

Internet Information Services (IIS) Components

If the Web Service is going to be installed, the required Internet Information Services (IIS) components must be enabled before Intelli-Site Lite is installed. The following sections are broken out by Windows version.

If .NET Framework 4.6 was installed before the components were enabled, Microsoft provides a program to run that will register ASP.NET for IIS.

Windows Server 2012 R2 and Later

To manage the IIS components, run the **Server Manager**. One of the easiest ways to click on the "Server Manager" icon in the tray. If it is not in the tray, click on the start menu then click the "Server Manager" button. The **Server Manager** opens, displaying the Dashboard.

Intelli-Site Lite 4.2 Installation Guide

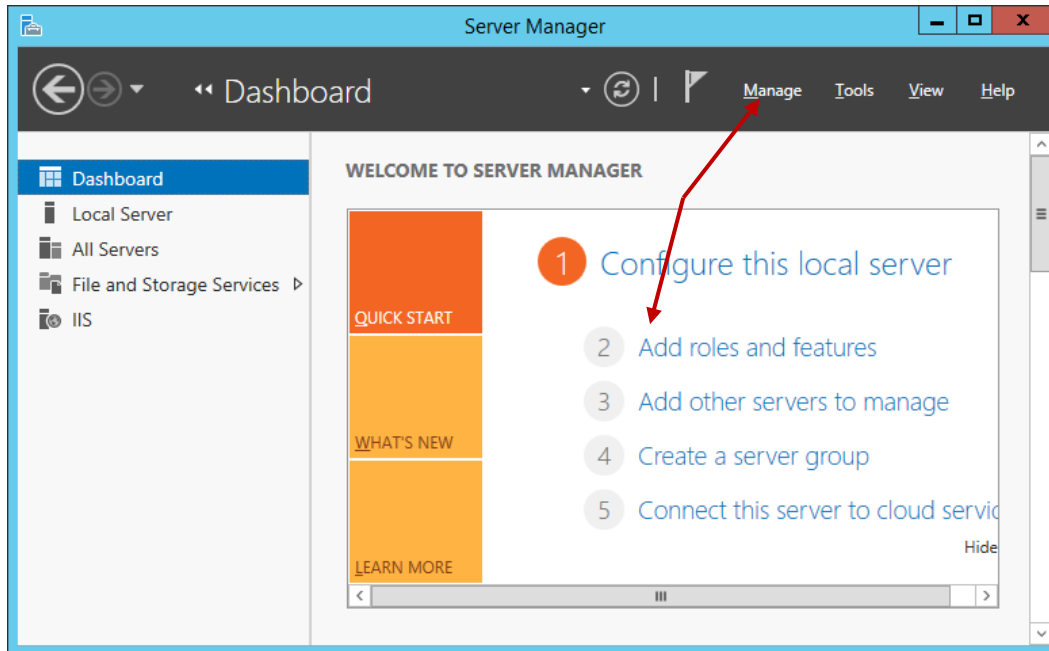


Figure 1 - Server Manager

If the Dashboard is not displayed, locate the Manage menu at the top of the window and choose the “Add Roles and Features” option, or click on Add roles and features. The **Add Roles and Features Wizard** window displays. Work through each page until you get to “Server Roles”.

Intelli-Site Lite 4.2 Installation Guide

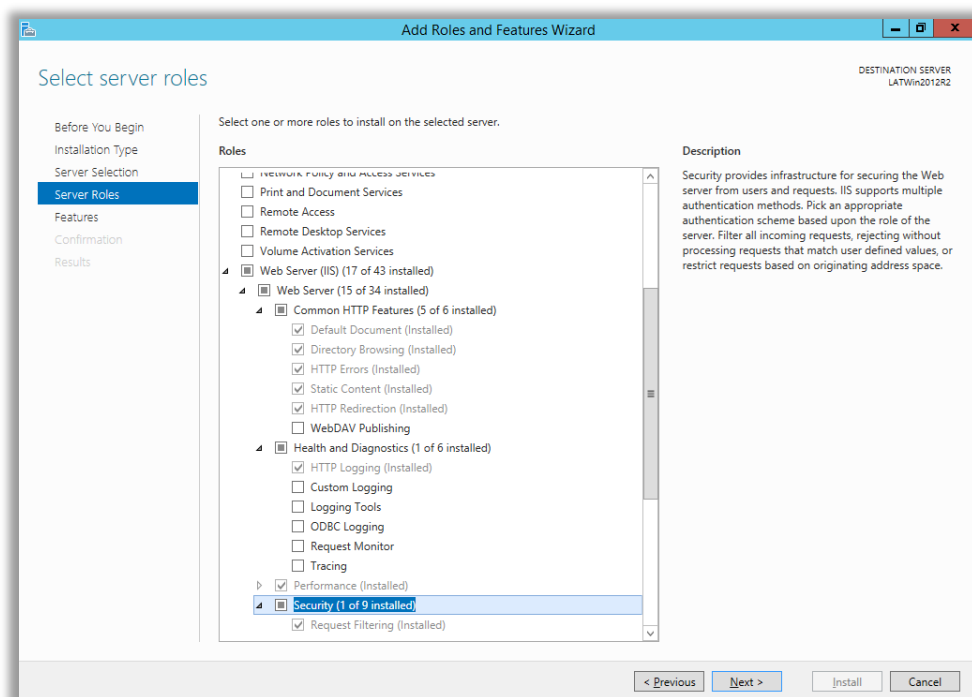


Figure 2 – Windows Server 2012 R2 Server Manager Add Server Roles

In the list of **Roles**, locate “Web Server (IIS)”. The following are the server role features that must be enabled for the Web Service to function properly. If even one of them is missing, the Web Service will not work as expected if at all.

Note: If other role services are currently enabled, DO NOT disable them. Other software on your system may need them.

- ✓ Web Server
 - ✓ Common HTTP Features
 - ✓ Default Document
 - ✓ Directory Browsing
 - ✓ HTTP Errors
 - ✓ Static Content
 - ✓ HTTP Redirection
 - ✓ Application Development
 - ✓ .NET Extensibility 4.5
 - ✓ ASP.Net 4.5
 - ✓ ISAPI Extensions
 - ✓ ISAPI Filters
 - ✓ Application Initialization
 - ✓ Web Socket Protocol

Intelli-Site Lite 4.2 Installation Guide

- ✓ Health and Diagnostics
 - ✓ HTTP Logging
- ✓ Security
 - ✓ Request Filtering
- ✓ Performance
 - ✓ Static Content Compression
 - ✓ Dynamic Content Compression
- ✓ Management Tools
 - ✓ IIS Management Console
 - ✓ IIS Management Scripts and Tools

Windows 11 and Other Desktop Versions

Since Windows 11 is not a Server, the IIS features must be managed through **Settings**. Open **Settings** and search for “Turn Windows features on or off”.

Note: Desktop versions of IIS have a limit of 10 concurrent connections.

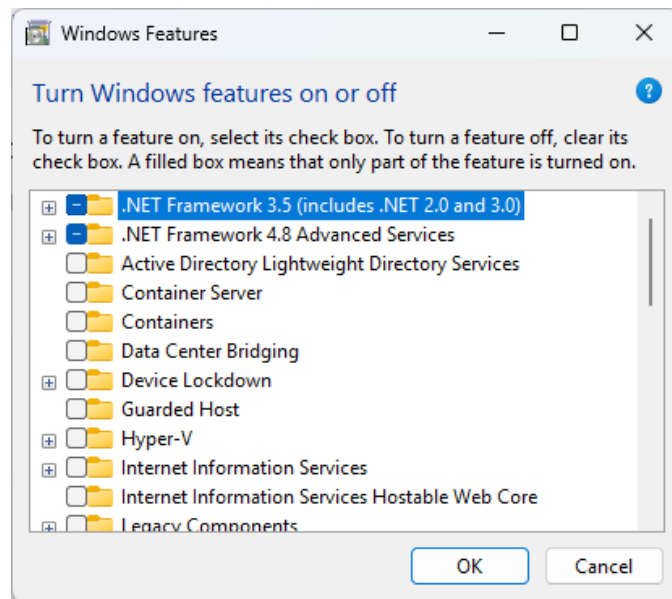


Figure 3 - Windows 11 Windows Features dialog

The following are the features that must be enabled for the Web Service to function properly. If even one of them is missing, the Web Service will not work as expected if at all.

Note: If other features are currently enabled, DO NOT disable them. Other software on your system may need them.

Intelli-Site Lite 4.2 Installation Guide

All of the required features are found under the **Internet Information Services** node. Be sure to check this node as well.

- ✓ Web Management Tools
 - ✓ IIS Management Console
 - ✓ IIS Management Scripts and Tools
- ✓ World Wide Web Services
 - ✓ Application Development Features
 - ✓ .NET Extensibility 4.8
 - ✓ ASP.Net 4.8
 - ✓ Application Initialization
 - ✓ ISAPI Extensions
 - ✓ ISAPI Filters
 - ✓ Web Socket Protocol
 - ✓ Common HTTP Features
 - ✓ Default Document
 - ✓ Directory Browsing
 - ✓ HTTP Errors
 - ✓ HTTP Redirection
 - ✓ Static Content
 - ✓ Health and Diagnostics
 - ✓ HTTP Logging
 - ✓ Request Monitor
 - ✓ Performance Features
 - ✓ Dynamic Content Compression
 - ✓ Static Content Compression
 - ✓ Security
 - ✓ Request Filtering

Registering ASP.NET with IIS


If .NET Framework 4.6.x was installed before the components were enabled, Microsoft provides a program that will register ASP.NET for IIS. The program is **aspnet_regiis.exe** and can be found in the following directory:

C:\Windows\Microsoft.NET\Framework\v4.0.30319

Run it twice, once with the '-i' option. The second time with '-r'.

Note: Administrator privileges are needed to run the program aspnet_regiis.exe.

Intelli-Site Lite 4.2 Installation Guide

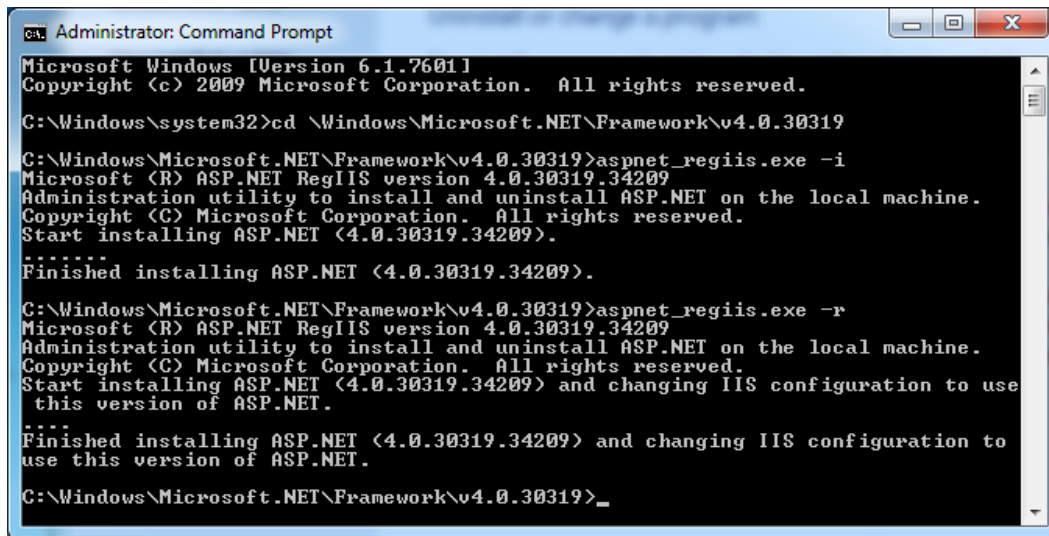

```
Administrator: Command Prompt
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Windows\system32>cd \Windows\Microsoft.NET\Framework\v4.0.30319

C:\Windows\Microsoft.NET\Framework\v4.0.30319>aspnet_regiis.exe -i
Microsoft (R) ASP.NET RegIIS version 4.0.30319.34209
Administration utility to install and uninstall ASP.NET on the local machine.
Copyright (C) Microsoft Corporation. All rights reserved.
Start installing ASP.NET (4.0.30319.34209).
*****
Finished installing ASP.NET (4.0.30319.34209).

C:\Windows\Microsoft.NET\Framework\v4.0.30319>aspnet_regiis.exe -r
Microsoft (R) ASP.NET RegIIS version 4.0.30319.34209
Administration utility to install and uninstall ASP.NET on the local machine.
Copyright (C) Microsoft Corporation. All rights reserved.
Start installing ASP.NET (4.0.30319.34209) and changing IIS configuration to use
this version of ASP.NET.
*****
Finished installing ASP.NET (4.0.30319.34209) and changing IIS configuration to
use this version of ASP.NET.

C:\Windows\Microsoft.NET\Framework\v4.0.30319>
```

Figure 4 - Command Prompt window after running aspnet_regiis.exe

Microsoft .NET Framework 4.6.x

Ensure that Microsoft .NET Framework 4.6.x is installed. This software may be downloaded via “Windows Update” or directly from the [Microsoft Download Center](#). If it is not installed, the Intelli-Site Lite installer will detect its absence and halt the installation with an explanation.

Installing Intelli-Site Lite Software

The following walks through the standard installation process for Intelli-Site Lite. Most facilities will install all software components on the same host computer. See section [Installing on Multiple Computers](#) for those instructions.

Verify that your hardware meets minimum system requirements as described in [Minimum System Requirements](#).

There are three major parts of the installation process:

- The Intelli-Site Lite Installer which installs the Intelli-Site Lite software
- PostgreSQL Database installation using the Intelli-Site Configuration Utility
- Project Creation and Web Service installation using the Intelli-Site Configuration Utility

Intelli-Site Lite 4.2 Installation Guide

The Intelli-Site Lite installer will set the Configuration Utility to automatically run on restart which will perform Intelli-Site Lite setup and create the Project.

Intelli-Site Lite Installer

To begin installing Intelli-Site Lite, run the Intelli-Site Lite installer. The Windows **User Account Control** dialog appears asking if you want to allow this app to make changes to your device. Click **Yes**. The **Preparing to Install...** screen will appear.

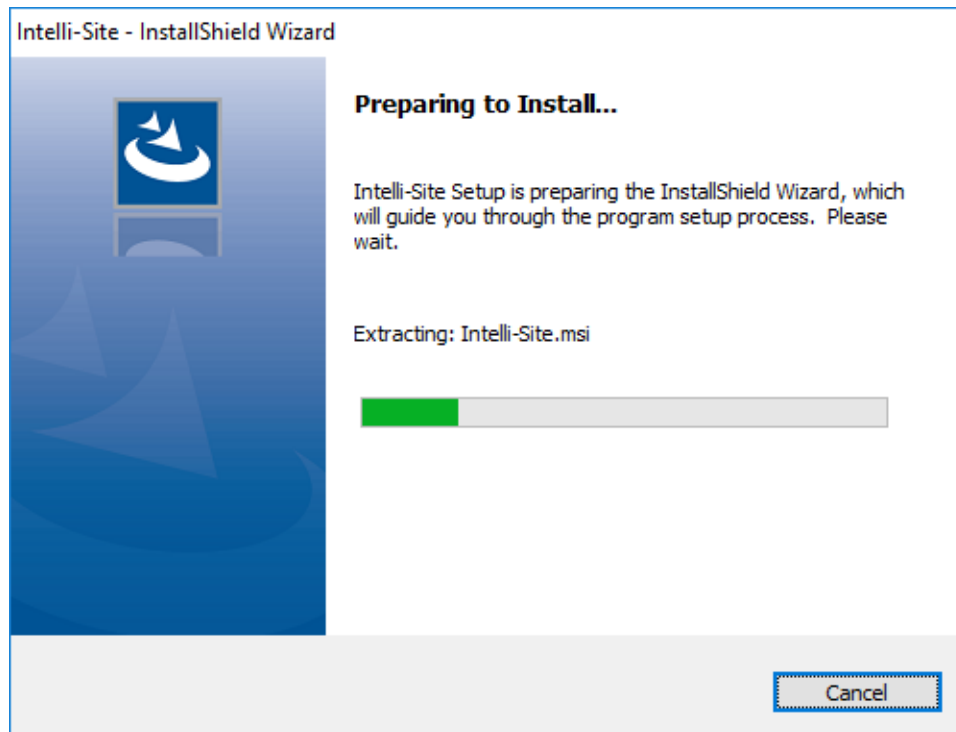


Figure 5 - InstallShield Preparing to Install... screen

This displays while the installation MSI is being extracted then runs it. The next screen is the **Welcome** screen.

Intelli-Site Lite 4.2 Installation Guide

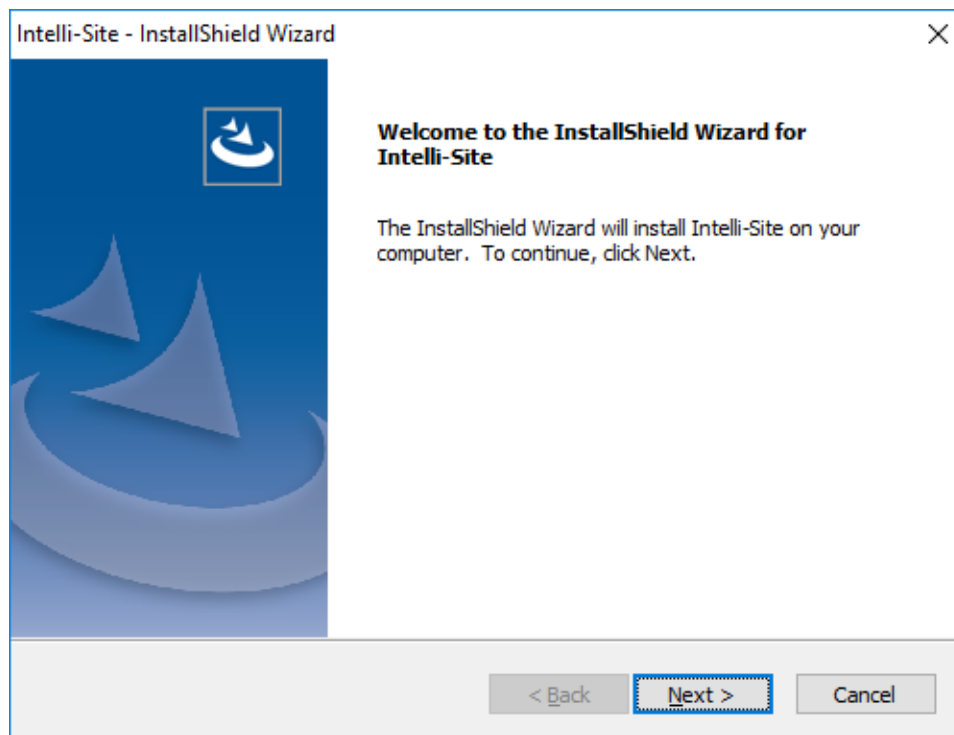
 


Figure 6 – InstallShield Welcome window

Click the  button. Next is the **License Agreement**.

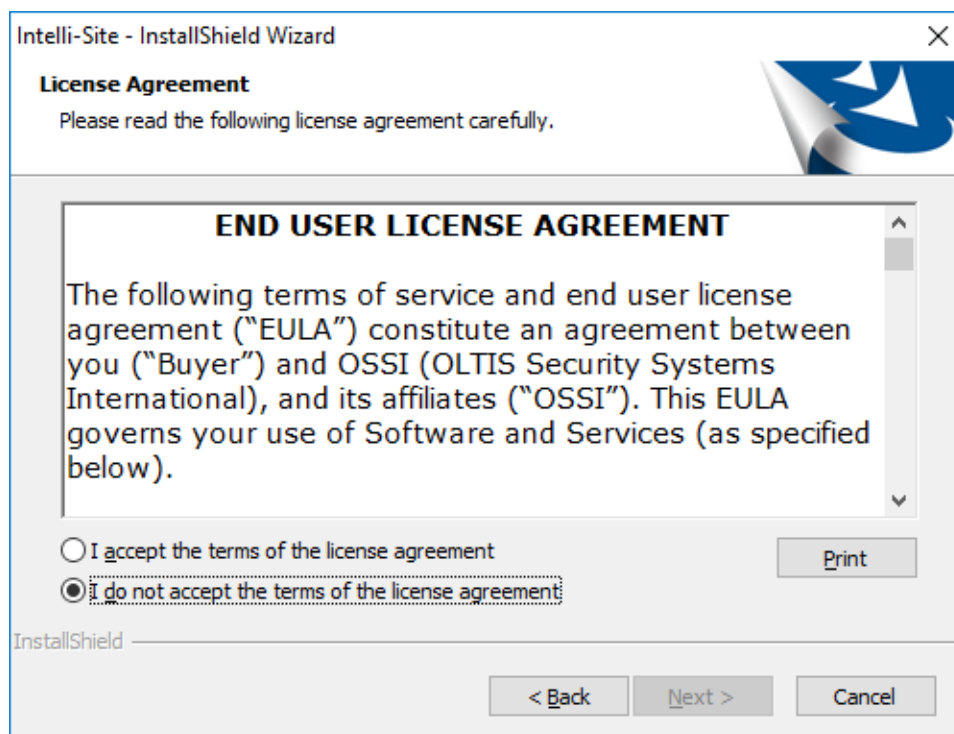
 


Figure 7 – License Agreement screen

Intelli-Site Lite 4.2 Installation Guide

The installation will not continue until the “**I accept the terms in the license agreement**” checkbox is checked. Please read the End-User License Agreement (EULA) carefully. You may choose to print the EULA. You will be able to read the EULA in the future within the Desktop Client using the  **About** option.

Once the checkbox is checked, the  button is enabled. Click it to continue.

The next window is the **Setup Type** window.

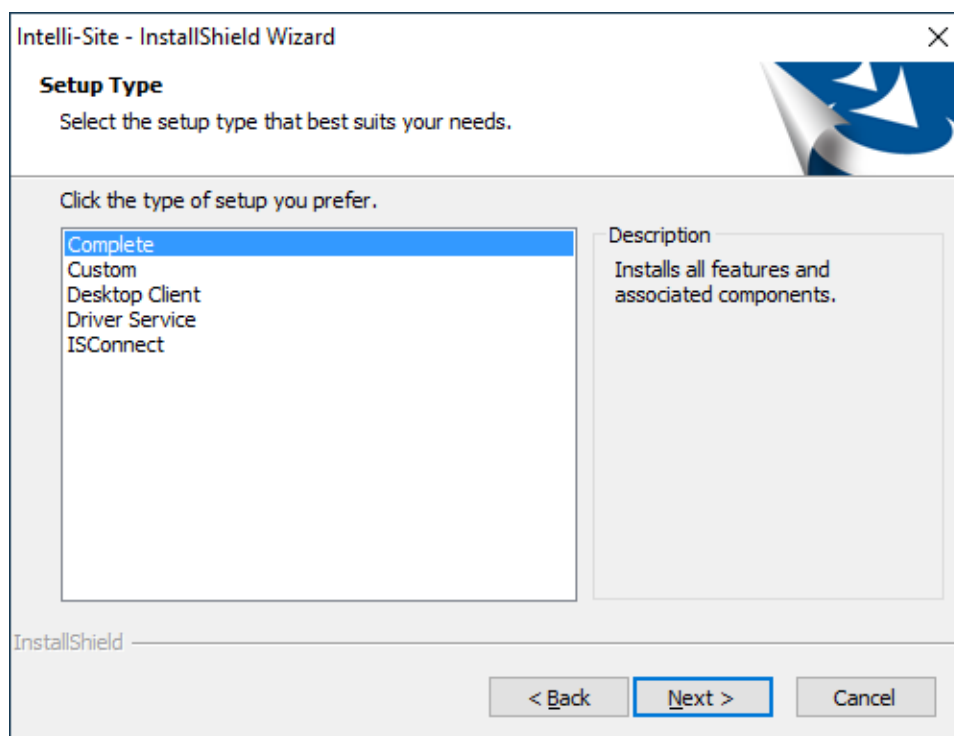


Figure 8 - Setup Type screen

There are four (4) options.

Complete – Installs all features and associated components

Custom – Allows you to specify which features to install; recommended for advanced users only

Desktop Client – Installs the Desktop Client application only

Driver Service – Installs the Driver Service and associated components

Intelli-Site Lite 4.2 Installation Guide

Note: *ISConnect is a desktop application to create configurations and import data from external sources (files and/or SQL databases).*

Highlight the desired setup type and click **Next >**. If **Custom** was highlighted, the **Select Features** screen appears allowing the user to specify the desired components. After this and for all other setup types, the **Select Drivers** screen displays.

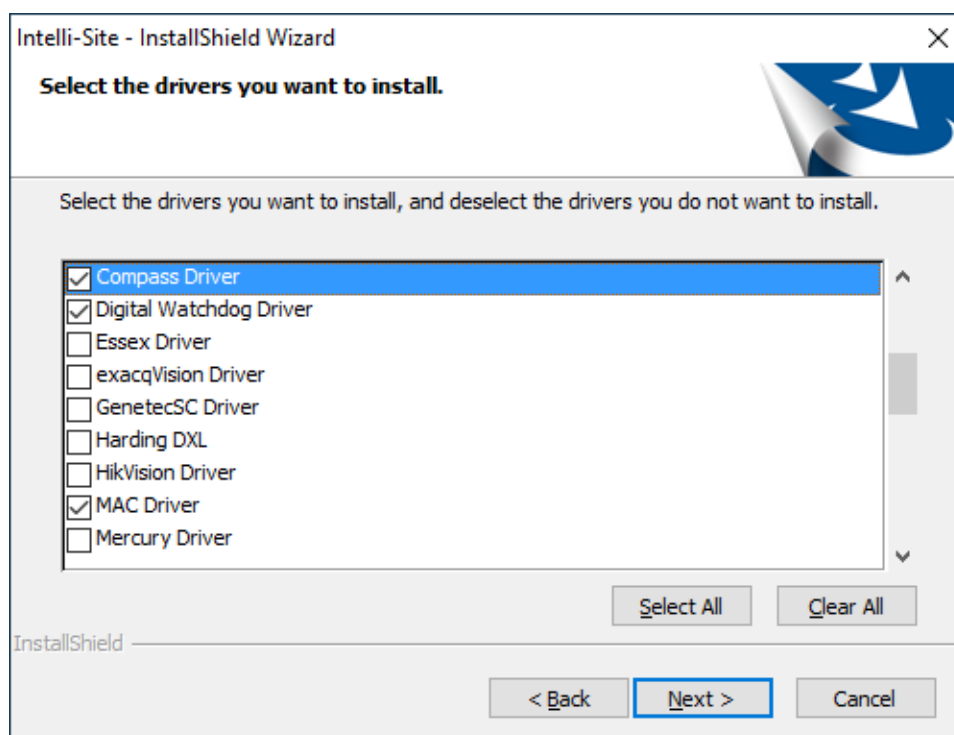


Figure 9 – Select Drivers screen

Note: *The drivers are listed in alphabetical order. You may need to scroll to find the desired driver(s).*

Check the necessary driver(s) then click **Next >**. The **Ready to Install the Program** screen displays.

Note: *Intelli-Site Lite only allows DOCPROPERTY "_Lite Drivers" * MERGEFORMAT Compass and MAC drivers. Intelli-Site has a comprehensive list of all possible drivers.*

Note: *For the Desktop Client only option, it is necessary to install all the drivers that were installed for the Engine installation, usually a "Complete" install. As a general rule, **Select All** is your friend for "Desktop Client" only installations.*

Intelli-Site Lite 4.2 Installation Guide

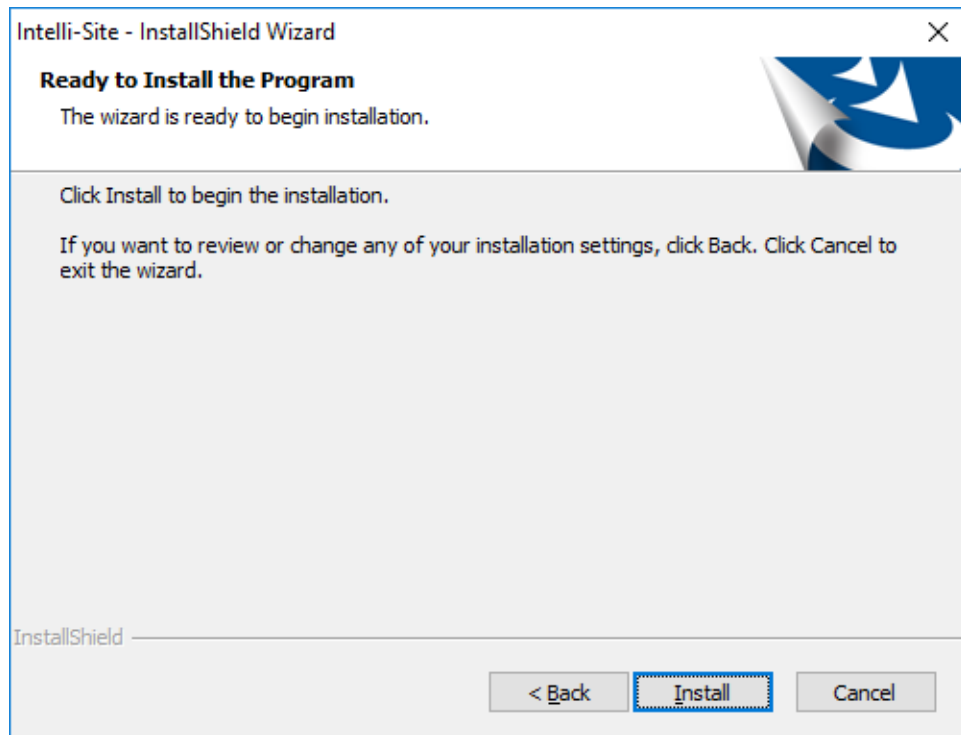


Figure 10 - Ready to install Intelli-Site Lite Screen

This screen gives you the opportunity to go back and change the installation option. Click **Install** to begin the installation.

Intelli-Site Lite 4.2 Installation Guide

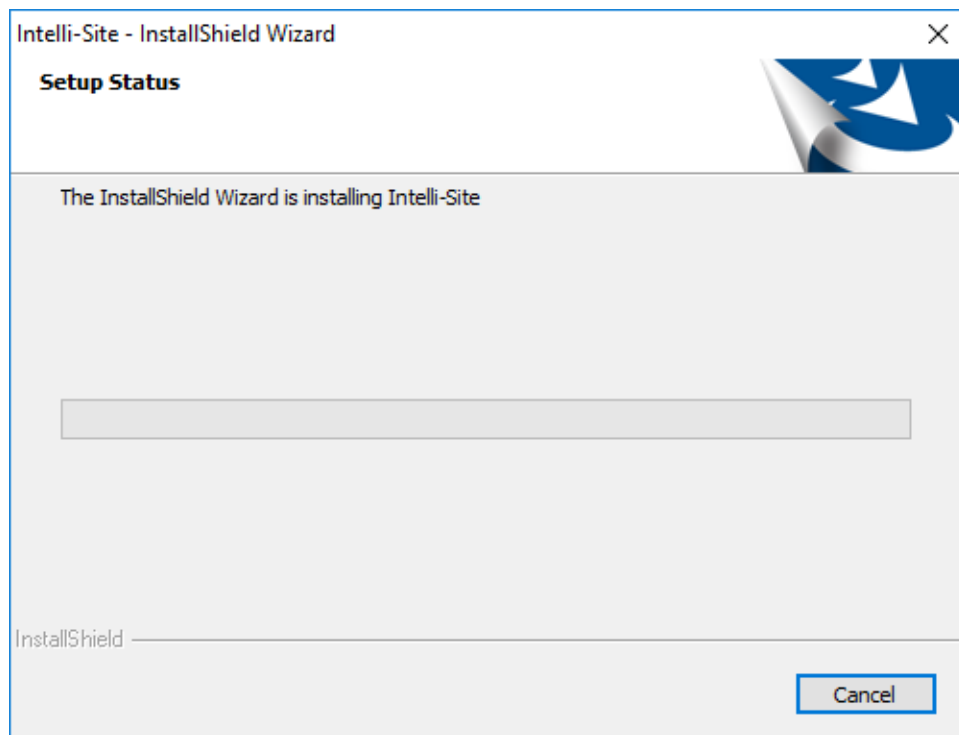


Figure 11 - Installing Intelli-Site Lite screen

The last InstallShield screen displays when the installation is complete.

Intelli-Site Lite 4.2 Installation Guide

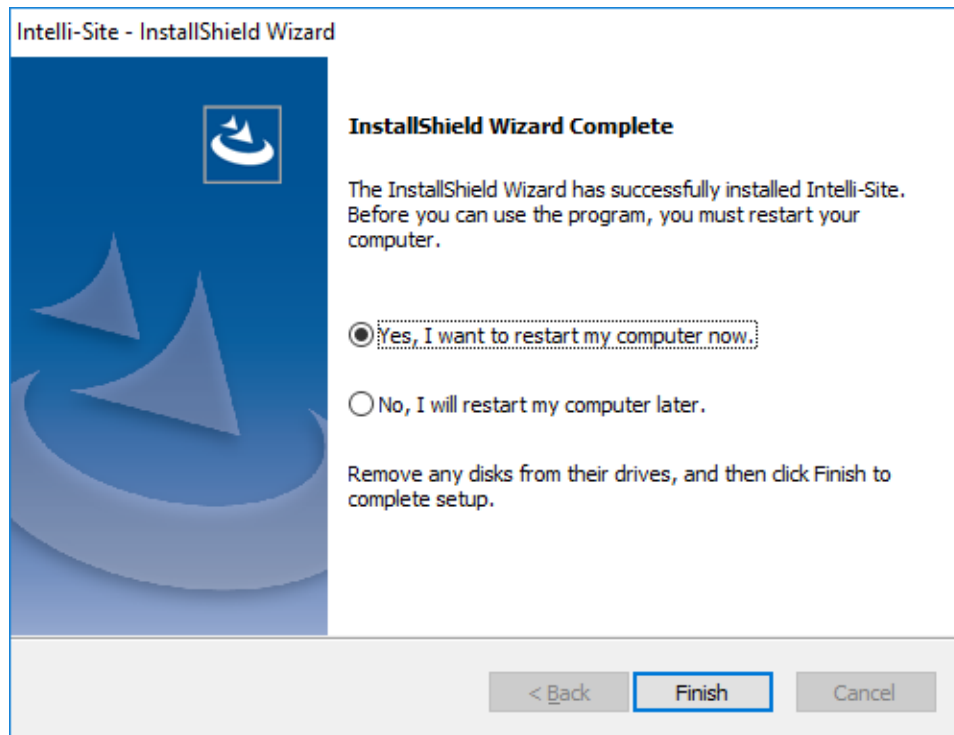


Figure 12 - InstallShield Complete screen

The computer must be restarted. After the computer is restarted, the Configuration Utility will launch which will perform Intelli-Site Lite Setup and create the Project. Click **Finish**.

Intelli-Site Lite Setup Module

The installer set the Configuration Utility to run on startup and install the database as well as create the first project. The Intelli-Site Lite Setup module installs, and configures PostgreSQL, the default database. During the PostgreSQL installation, Microsoft Visual C++ 2013 Redistributables are installed as well.

Note: *There are startup dependencies for Intelli-Site Lite. Because of this, it may take as long as 2 minutes before the Setup Module appears. It rarely takes this long, but depending on the system it could.*

Once the installation is complete the following screen displays.

Intelli-Site Lite 4.2 Installation Guide

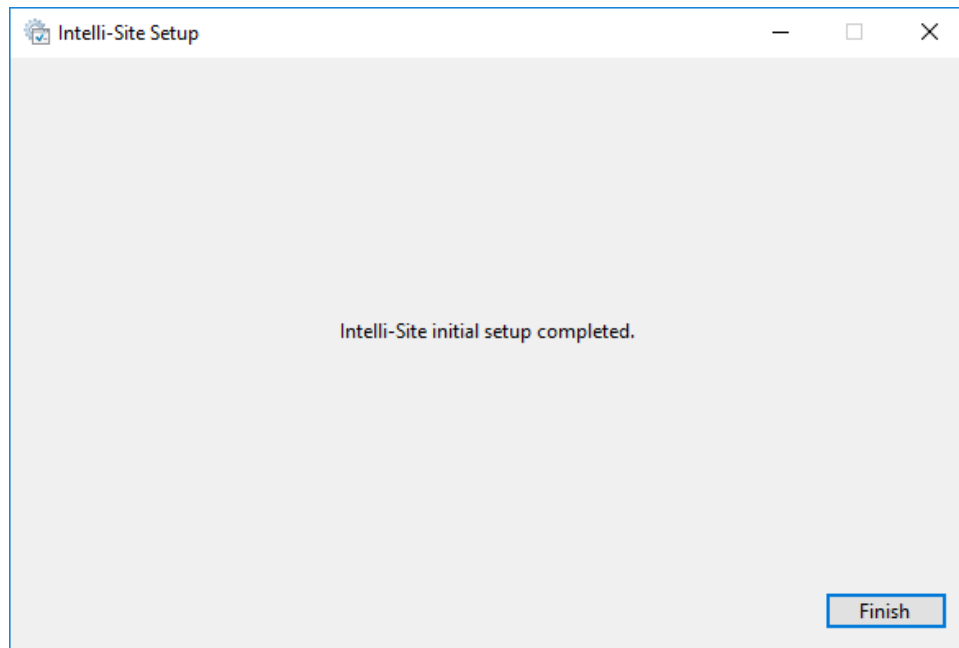


Figure 13 - Final Intelli-Site Lite Initial Setup screen

Click the **Finish** button. The Intelli-Site Lite Configuration Utility main window displays. Because there is no Project, it opens the **Project Setup** dialog. Without a Project, the Engine cannot start.

Project Creation and Web Service Installation

When the Configuration Utility detects no project, it automatically opens the **Project Setup** dialog.

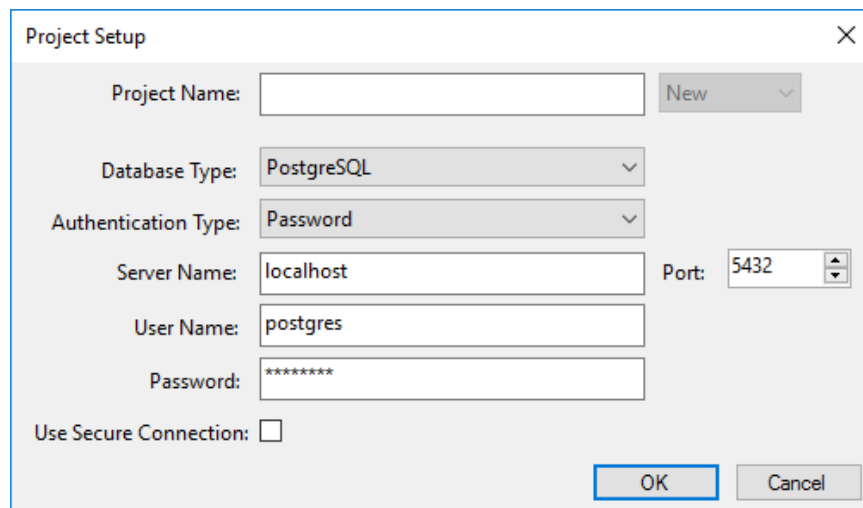
 


Figure 14 - Project Setup dialog

Intelli-Site Lite 4.2 Installation Guide

Enter the name of the Intelli-Site Lite Project. Please make it descriptive of the Site at which the project will be used, for example: Software Giants, LLC. Click  to create the project.

Note: The User Name and Password are filled in with the default username and password used when PostgreSQL was installed. If for some reason, PostgreSQL was previously installed or if the default username or password has been changed, you will need to enter the correct information.

Intelli-Site Lite 4.2 Installation Guide

Notice that the Web Service is not installed by default.

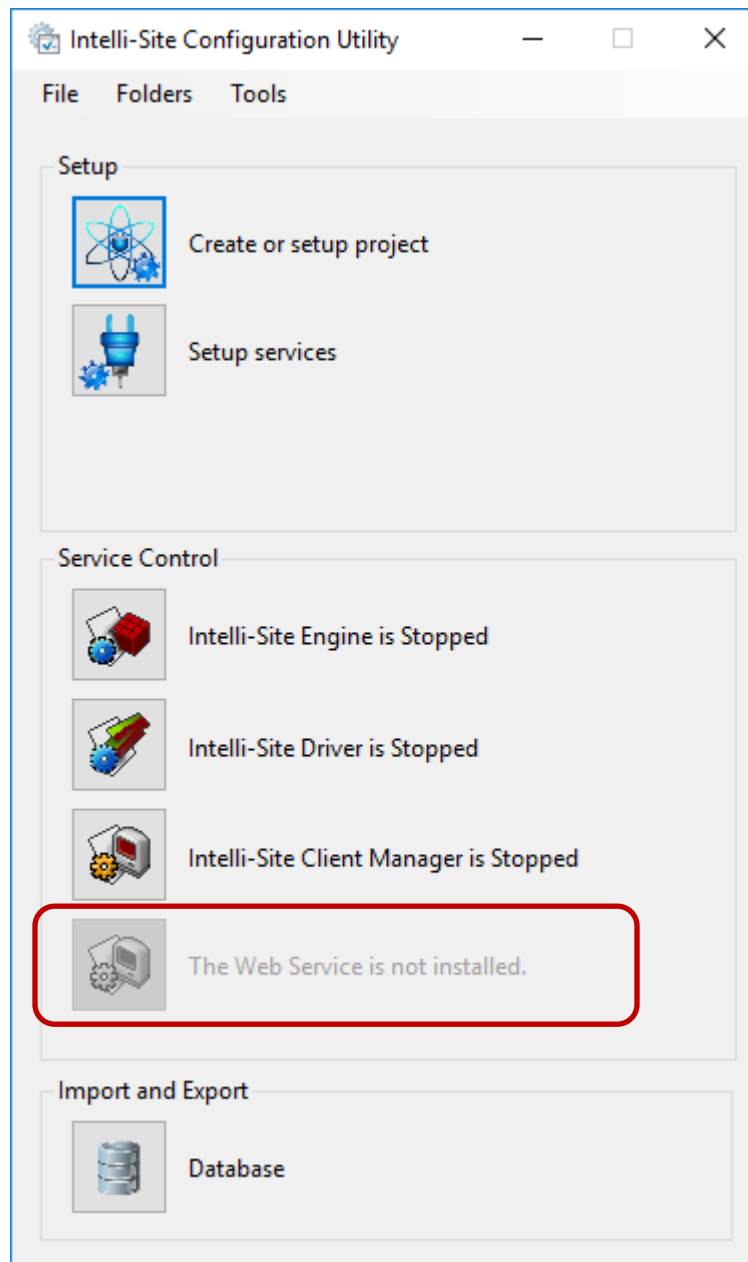



Figure 15 – Configuration Utility after Project creation

If the Web Service component was selected during installation, now would be the time to finish the process.

Note: Ensure the Internet Information Services (IIS) Components have been enabled. See section [Internet Information Services \(IIS\) Components](#).

Intelli-Site Lite 4.2 Installation Guide

Click  **Setup services** to bring up the **Service Setup** dialog.

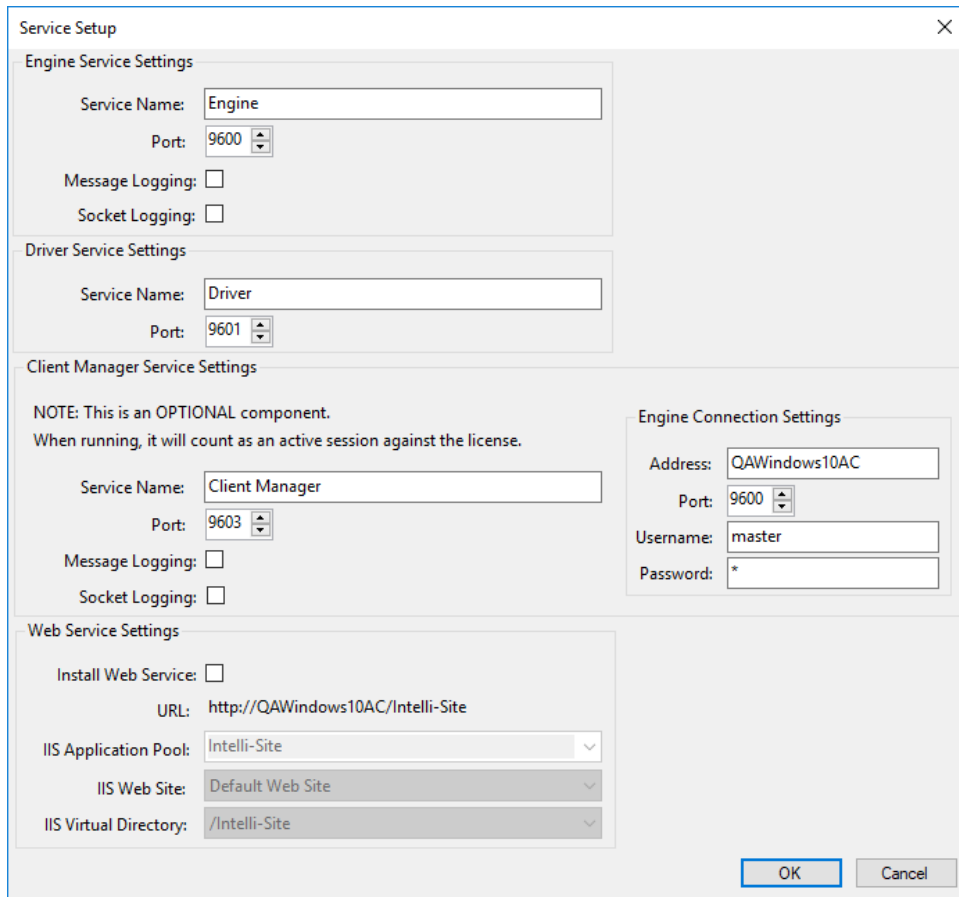

 
The Service Setup dialog box is divided into several sections for configuring different services:

- Engine Service Settings:** Service Name: Engine, Port: 9600, Message Logging: ☐, Socket Logging: ☐.
- Driver Service Settings:** Service Name: Driver, Port: 9601.
- Client Manager Service Settings:** Includes a note: "NOTE: This is an OPTIONAL component. When running, it will count as an active session against the license." Service Name: Client Manager, Port: 9603, Message Logging: ☐, Socket Logging: ☐.
- Engine Connection Settings:** Address: QAWindows10AC, Port: 9600, Username: master, Password: *.
- Web Service Settings:** Install Web Service: ☐, URL: http://QAWindows10AC/Intelli-Site, IIS Application Pool: Intelli-Site, IIS Web Site: Default Web Site, IIS Virtual Directory: /Intelli-Site.

Buttons for OK and Cancel are located at the bottom right.

Figure 16 - Service Setup dialog

Notice that there are settings for the Engine Service, Driver Service, Client Manager Service, and Web Service. Very seldom will any of these settings need to be changed. If they do need to be modified, it will be at the request of Technical Support. See section Setup Services in the User's Manual for more information about these settings.

The **Web Service Settings** group shows the IIS settings that will be used when the Web Service is installed. This information is important if the host computer has any other web sites. Feel free to share this information with your IT department. It also shows you what the URL for the Web Service will be once it has been installed. To install the Web Service, check **Install Web Service** then click .

Intelli-Site Lite 4.2 Installation Guide

The Configuration Utility will install the Web Service and start it.

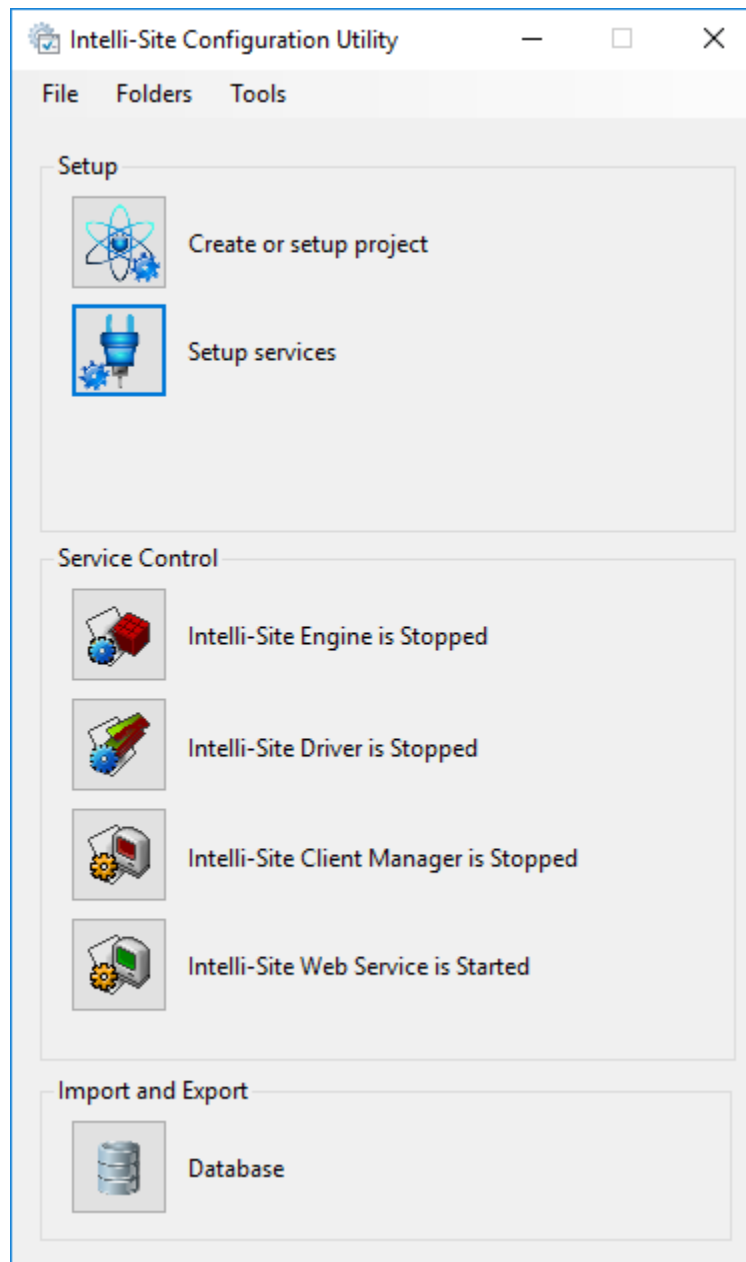


Figure 17 - Configuration Utility after installing the Web Service

Congratulations! Intelli-Site Lite is installed. Next comes licensing the software.

Intelli-Site Lite 4.2 Installation Guide

Licensing Intelli-Site Lite

 
Immediately after installation, Intelli-Site Lite has a simple demonstration license which will allow you to perform basic programming and evaluation of the software. The exact details of the demonstration license are listed on the **License** tab of the  **About** dialog in the Desktop Client.

When the software was purchased, specific quantities, modules, driver classes, and a software maintenance agreement were included in the order. The license will activate the purchased elements.

Before we can activate the license the Intelli-Site Engine must be running. Run the Intelli-Site Configuration Utility.

If the Intelli-Site Engine is stopped, start it by clicking on the  **Intelli-Site Engine** tile. The first time the Engine is started takes a little longer than any other time as there are setup tasks that it does that it won't have to do ever again.


Once the Engine status shows "Intelli-Site Engine is Running", launch the Intelli-Site Desktop Client and logon. The default username is **master**. The default password is **m**.

Since this is the first time you've logged in, backup has not been configured. Intelli-Site will popup a dialog asking if you want to do so now. For now, click . Backup can be configured later.

Click on the  button in the lower left-hand corner to open the application menu. Select  to open the  **About** dialog.

Intelli-Site Lite 4.2 Installation Guide

The details of the license can be found on the **License** tab of the  **About** dialog.

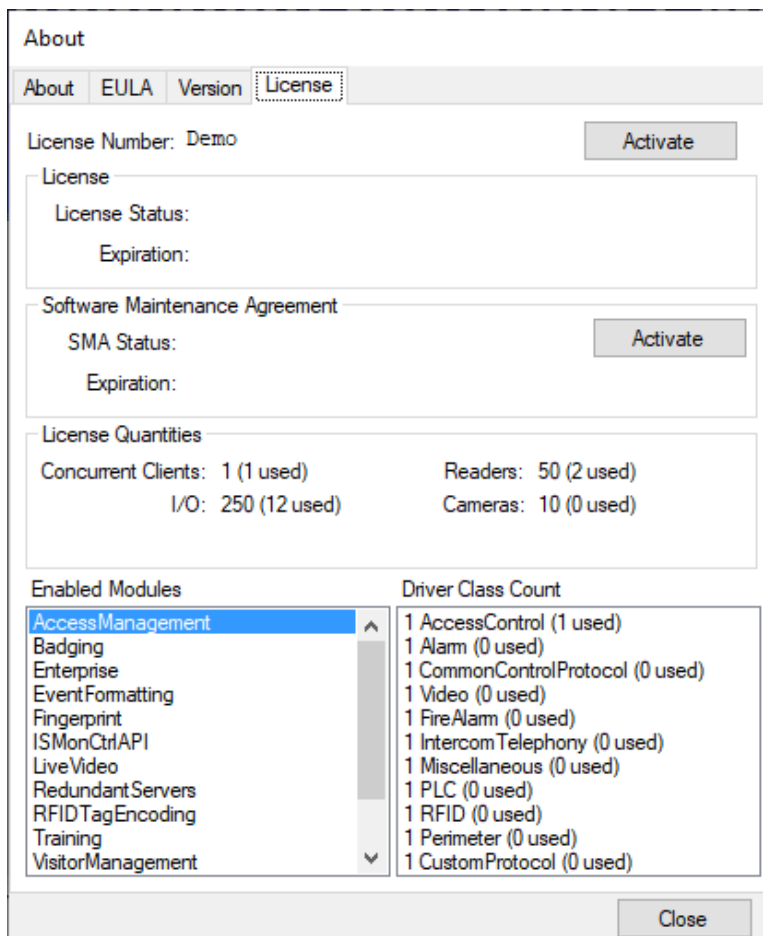

The image shows the 'About' dialog box with the 'License' tab selected. The dialog contains sections for License, Software Maintenance Agreement, License Quantities, and Enabled Modules/Driver Class Count.

License	
License Number:	Demo
Activate	
License Status:	
Expiration:	

Software Maintenance Agreement	
SMA Status:	
Expiration:	
Activate	

License Quantities	
Concurrent Clients:	1 (1 used)
I/O:	250 (12 used)
Readers:	50 (2 used)
Cameras:	10 (0 used)

Enabled Modules	Driver Class Count
AccessManagement	1 AccessControl (1 used)
Badging	1 Alarm (0 used)
Enterprise	1 CommonControlProtocol (0 used)
EventFormatting	1 Video (0 used)
Fingerprint	1 FireAlarm (0 used)
ISMonCtrlAPI	1 IntercomTelephony (0 used)
LiveVideo	1 Miscellaneous (0 used)
RedundantServers	1 PLC (0 used)
RFIDTagEncoding	1 RFID (0 used)
Training	1 Perimeter (0 used)
VisitorManagement	1 CustomProtocol (0 used)

 
Figure 18 - Default Demo License for Intelli-Site Lite

There are two parts of a license for Intelli-Site Lite. There is the license itself and the Software Maintenance Agreement (SMA). The activation process of the SMA is the same as the process for the license. We will walk through the procedure for the license. Then you will use the same process to activate the SMA.

There are two ways to activate the license. The preferred method is online. But if the Engine does not have access to the internet or you have not been provided and Activation Key, there is an offline method available.

Intelli-Site Lite 4.2 Installation Guide

Online Activation

If the computer running the Engine Service has internet access and you already have an Activation Key from your sales representative, then we can activate it right now. Click the  button to open the **Active License** dialog.

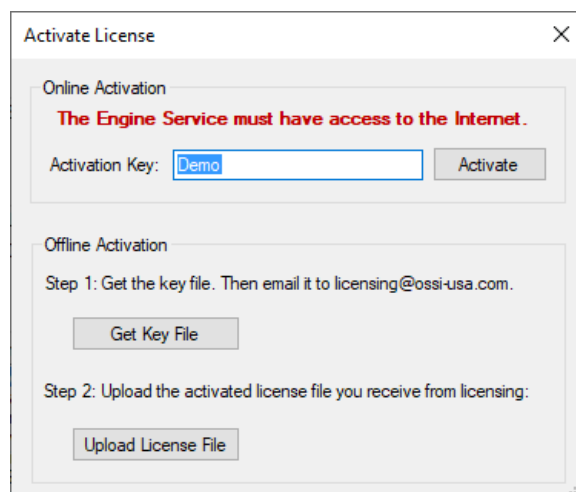
 


Figure 19 - Activate License dialog

Type in the Activation Key then click the  button. The Engine takes the Activation Key and contacts our secure servers to activate the license.

Repeat this with the SMA key.

Congratulations! You are now the proud owner of a fully licensed version of Intelli-Site Lite. The **License** tab now displays the license details that were purchased and activated. In addition, the status bar at the bottom of the Desktop Client window displays the license state and date including the SMA.

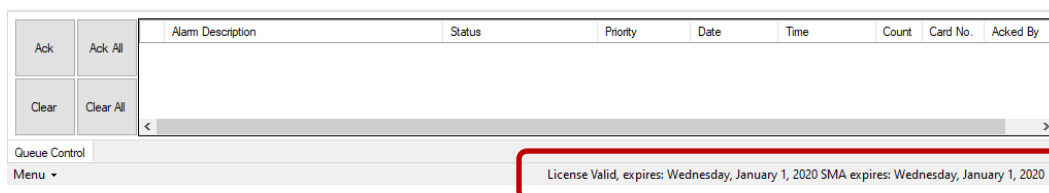


Figure 20 - License Status

Intelli-Site Lite 4.2 Installation Guide

Offline Activation

If the computer running the Engine Service does not have internet access or you don't have an Activation Key from your sales representative, then license must be activated offline. Offline activation consists of creating an activation key file that is emailed to licensing@ossi-usa.com. Then waiting for a license file to be returned via email which you will then upload to Intelli-Site.

Get Key File and Email It

In the **About** dialog, click the  button to open the **Active License** dialog.

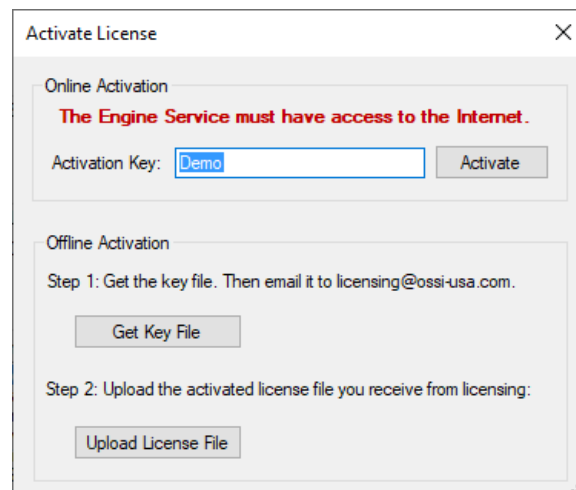
 


Figure 21 - Activate License dialog

To generate the Activation Key request, click the  button. The **Save Key File as...** dialog appears. The name of the file is the name of the project with the .key extension.

Intelli-Site Lite 4.2 Installation Guide

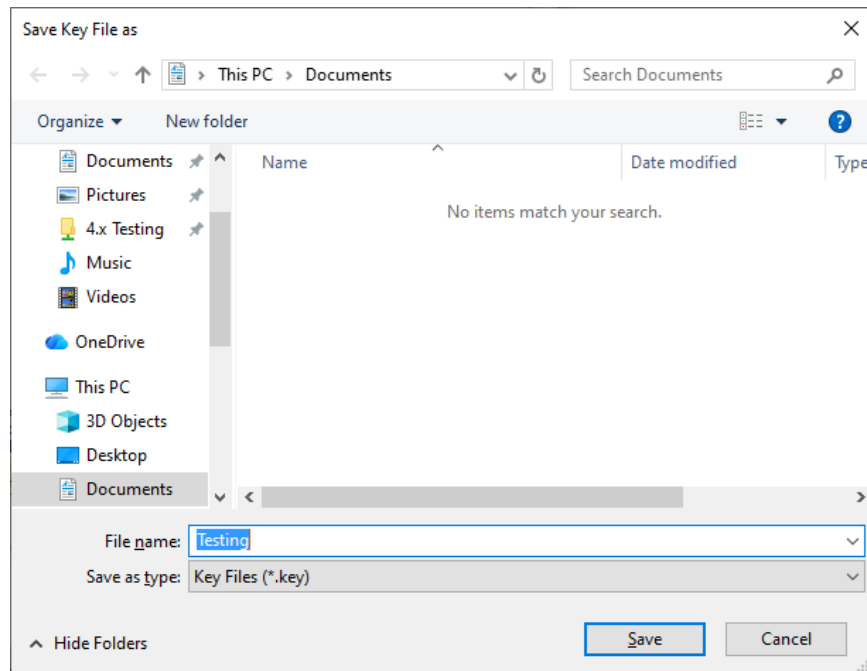


Figure 22 – Save Key File as... dialog

Save the file. Email this file to licensing@ossi-usa.com along with the PO number of your order.

Load the License File

When OSS I sends the license file to you, copy this file to the computer running the Intelli-Site Lite Engine.

Launch the Desktop Client, logon, and return to the **License** tab of the **About** dialog. Click on **Upload License File** button again.

In the **Open** dialog, locate the activation file (*.lic) that OSS I sent. Select it and click **Open**. The Engine will load the file and activate the license accordingly.

Congratulations! You are now the proud owner of a fully licensed version of Intelli-Site Lite. The **License** tab now displays the license details that were purchased and activated. In addition, the status bar at the bottom of the Desktop Client window displays the license state and date including the SMA.

Intelli-Site Lite 4.2 Installation Guide

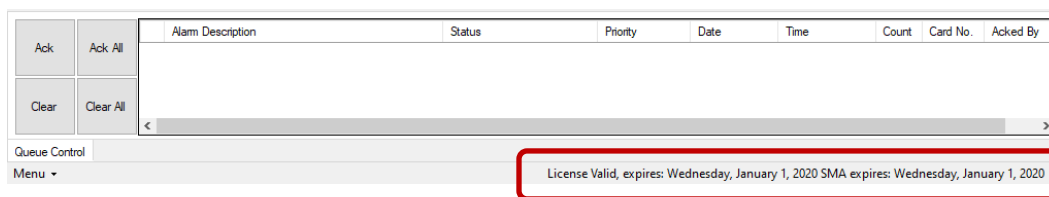


Figure 23 - License Status

Note: For a quick introduction to using Intelli-Site, please see the separate Quick Start Guide.

Intelli-Site Lite 4.2 Installation Guide

Table of Figures

Figure 1 - Server Manager	21
Figure 2 - Windows Server 2012 R2 Server Manager Add Server Roles	22
Figure 3 - Windows 11 Windows Features dialog.....	23
Figure 4 - Command Prompt window after running aspnet_regiis.exe.....	25
Figure 5 - InstallShield Preparing to Install... screen	26
Figure 6 - InstallShield Welcome window	27
Figure 7 - License Agreement screen	27
Figure 8 - Setup Type screen	28
Figure 9 - Select Drivers screen	29
Figure 10 - Ready to install Intelli-Site Lite Screen	30
Figure 11 - Installing Intelli-Site Lite screen	31
Figure 12 - InstallShield Complete screen.....	32
Figure 13 - Final Intelli-Site Lite Initial Setup screen.....	33
Figure 14 - Project Setup dialog	33
Figure 15 - Configuration Utility after Project creation.....	35
Figure 16 - Service Setup dialog.....	36
Figure 17 - Configuration Utility after installing the Web Service.....	37
Figure 18 - Default Demo License for Intelli-Site Lite	39
Figure 19 - Activate License dialog.....	40
Figure 20 - License Status	40
Figure 21 - Activate License dialog.....	41
Figure 22 - Save Key File as... dialog	42

Intelli-Site Lite 4.2 Installation Guide

Figure 23 - License Status	43
----------------------------------	----

Revision History

2025-10-28 Created